



Quick Curve PLATE

1 Shape to desired position

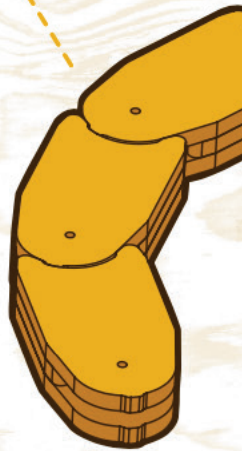

3 Install as you would other framing members

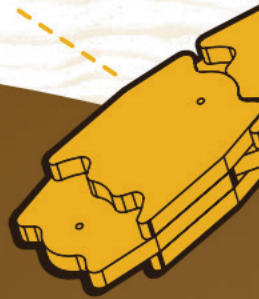

Nothing's Faster!

- ▶ Shape it by hand
- ▶ Secure the shape with nails or staples
- ▶ Plywood sections link easily to form any length
- ▶ Works with typical wood 2x4 or 2x6 (top & bottom plates)
- ▶ Nail, cut & anchor with same tools used for lumber
- ▶ Use as curved vertical studs (non-load bearing)
- ▶ Minimum outside radius 2x4: 12"
Minimum outside radius 2x6: 18"

Treated Quick Curve Plate!



2 x 4 Pressure-Preservative Treated

2 x 6

